


Document Ref: TCPI-BAS
Issue No: 1. TDC1-BDS 8811

Greenbank Electronics
Telephone: 051-645 3391

Interak 1


TAPE
CASSETTE

MAINS COMPUTER CASSETTE PLAYER

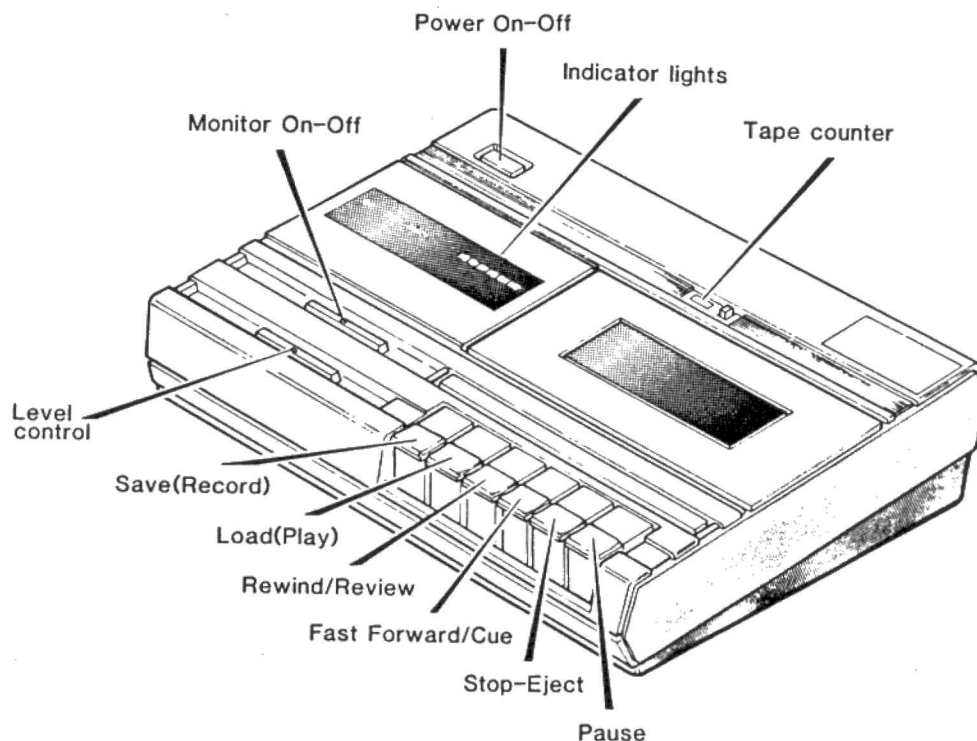

CONNECTIONS TO COMPUTER

START-STOP CONTROL

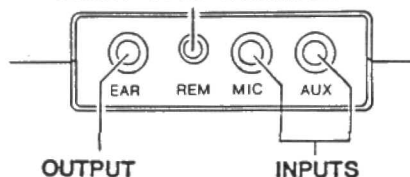

LOAD (Playback)

The playback signal to the computer is connected via the EAR socket.

All sockets are jack type connectors; the REM socket is a 2.5mm type and the others are 3.5mm.

SAVE (Record)

The recorder output from the computer may be connected either to the socket marked AUX or, if your computer has facilities for starting and stopping Save/Load, the sockets marked MIC - REM can be used with connection to the REM socket for switching and MIC for the Save (record) input. The MIC input has a higher sensitivity than the AUX input.

Order Code: 3T31
Price: 29.95 + VAT